


Thank you for purchasing this EcoServe GN. It is a waterless replacement for chafing dishes that keeps food warm using the EcoBurner, or cool using the EcoServe Cool Pack. Please follow the use and care instructions to ensure it retains its high quality finish.


**WARNING:** The EcoServe GN is only to be used with the EcoBurner and EcoBurner fuel. Any other heat source will cause damage that can not be repaired.

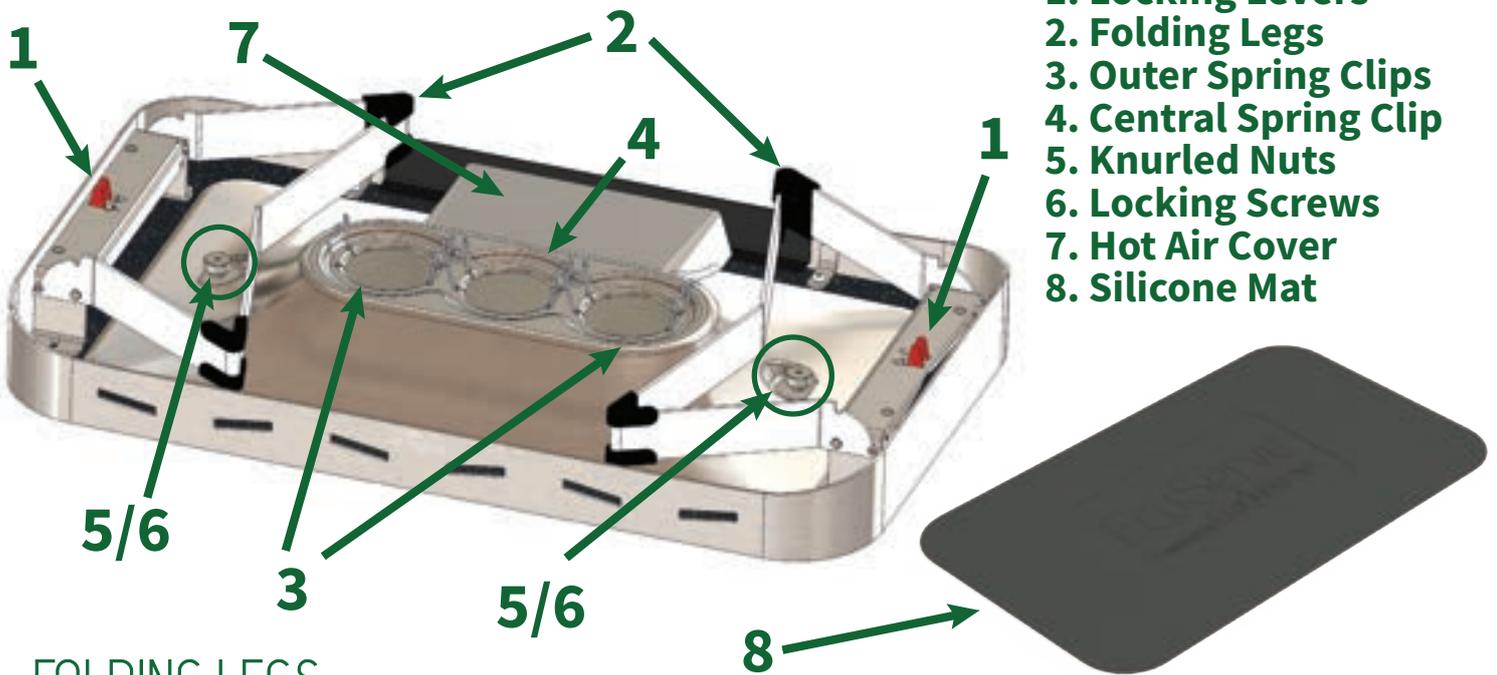


### FOLDING LEGS:

The legs fold neatly so that the EcoServe GN can be stacked and stored away conveniently.

1. Lay the EcoServe GN upside down on a soft surface to prevent scratching.

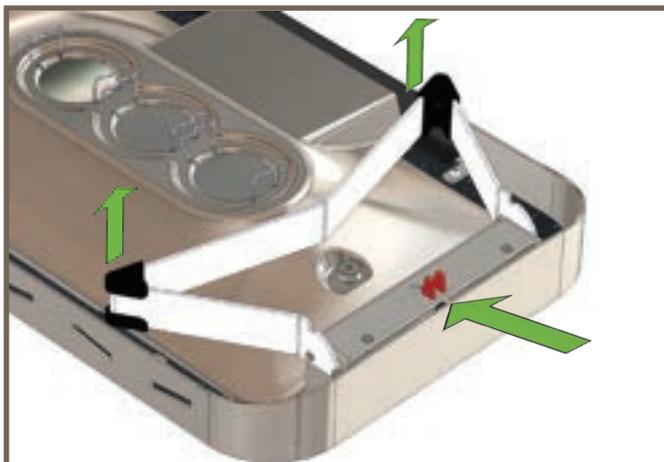


2. To unfold the legs, firstly move and hold the locking levers (1) in the direction shown by the arrow cut-outs. Then fold the legs (2) to the upright position in the direction of the green arrows.

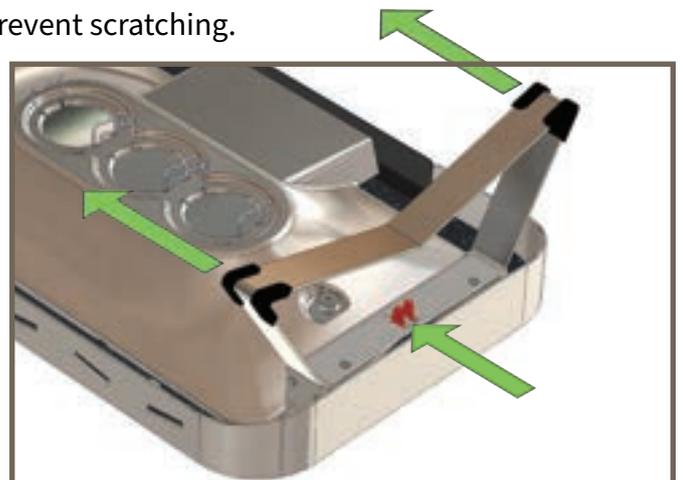

3. To fold the legs for stacking and storing away, move and hold the locking levers (1) in the direction shown by the arrow cut-outs. Then fold the legs to the stowed position as shown by the green arrows.

## FITTING & LIGHTING THE ECOBURNER:


The EcoServe GN may be powered by one or two EcoBurners. Powering with one EcoBurner is suitable for most indoor uses. Powering with two is best suited to outdoor use.

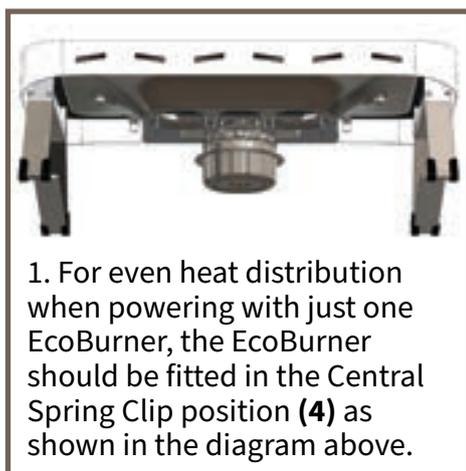


1. For even heat distribution when powering with just one EcoBurner, the EcoBurner should be fitted in the Central Spring Clip position (4) as shown in the diagram above.



2. When powering with two EcoBurners, it is only possible to fit them in the Outer Spring Clip positions (3) as shown in the diagram above.

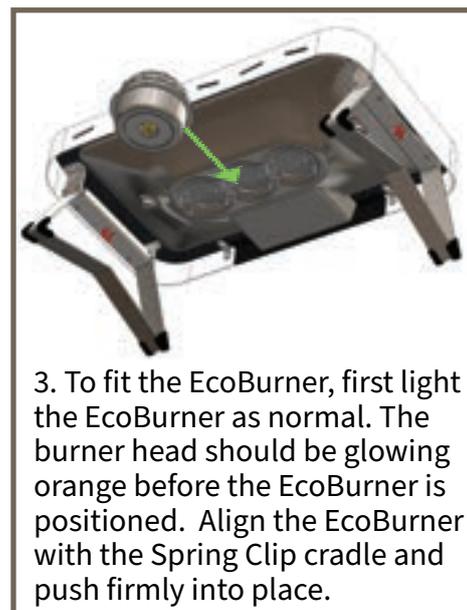

3. To fit the EcoBurner, first light the EcoBurner as normal. The burner head should be glowing orange before the EcoBurner is positioned. Align the EcoBurner with the Spring Clip cradle and push firmly into place.

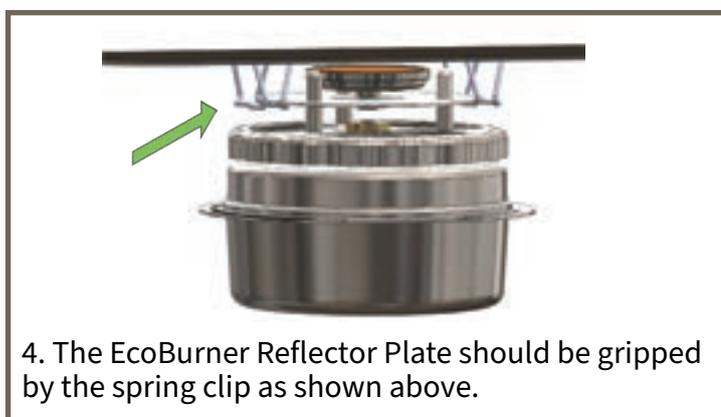


4. The EcoBurner Reflector Plate should be gripped by the spring clip as shown above.

**THE ECOSERVE GN SHOULD NOT BE USED WITHOUT THE SILICONE MAT BEING IN PLACE.**

## HEAT PROTECTION USING SILICONE MAT

The Silicone Mat is placed onto the hotplate of the EcoServe GN to protect users from the direct heat of the hotplate. It also protects the hotplate from scratches. Replacement Silicone Mats are available to purchase from EcoBurner as part #9508 or US part #EB19508.

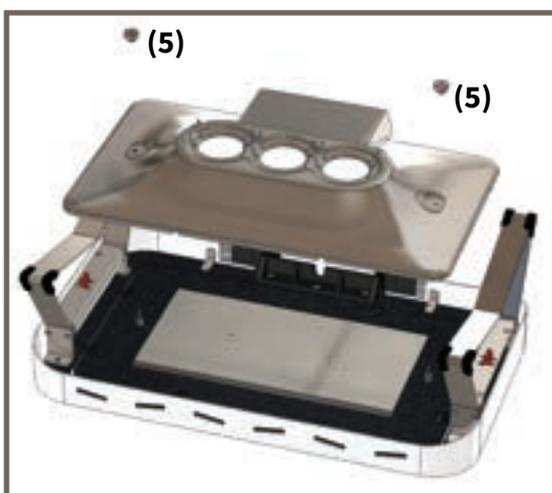

## MAINTENANCE & CLEANING

The Hot Air Cover (7) may be removed for cleaning.

1. The legs should be in the unfolded position before beginning.
2. Lay the EcoServe GN upside down on a soft surface to prevent scratching.
3. Unscrew both Knurled Nuts(5) and lift the cover away from the Locking Screws(6). When refitting, be careful to align the cover holes with the Locking Screws(6).
4. All parts of the EcoServe GN, including the Silicone Mat should be wiped clean with a damp cloth to retain the best quality finish. Do not use abrasive cleaners as these will damage the product.

**Please retain this leaflet for future reference.**

EcoBurner Ltd., Unit 5, Gulfstream Ave., Airside Business Park, Waterford X91RF20 Ireland  
+353 51353806 www.ecoburner.com info@ecoburner.com